



**BOSCH**

**Register** your  
new appliance  
now at MyBosch and  
enjoy benefits free of  
charge:  
[bosch-home.com/  
welcome](https://bosch-home.com/welcome)



# Washing machine

**WGK264ZXME**

**[en]** User manual and installation instructions



**You can find additional information and explanations online.  
Scan the QR code on the title page.**



## Table of contents

|                                                           |           |                                                                           |           |
|-----------------------------------------------------------|-----------|---------------------------------------------------------------------------|-----------|
| <b>1 Safety .....</b>                                     | <b>3</b>  | <b>11 Laundry .....</b>                                                   | <b>25</b> |
| 1.1 General information .....                             | 3         | 11.1 Preparing the laundry .....                                          | 25        |
| 1.2 Intended use .....                                    | 3         | 11.2 Care symbols on the care labels .....                                | 26        |
| 1.3 Restriction on user group .....                       | 4         | <b>12 Detergents and care products .....</b>                              | <b>26</b> |
| 1.4 Safe installation .....                               | 4         | <b>13 Basic operation .....</b>                                           | <b>26</b> |
| 1.5 Safe use .....                                        | 6         | 13.1 Switching on the appliance ..                                        | 26        |
| 1.6 Safe cleaning and maintenance .....                   | 8         | 13.2 Setting a programme .....                                            | 26        |
| <b>2 Preventing material damage .....</b>                 | <b>8</b>  | 13.3 Opening the door .....                                               | 27        |
| <b>3 Environmental protection and saving energy .....</b> | <b>9</b>  | 13.4 Loading laundry .....                                                | 27        |
| 3.1 Disposing of packaging .....                          | 9         | 13.5 Adding detergent and care product .....                              | 27        |
| 3.2 Save energy and conserve resources .....              | 10        | 13.6 Starting the programme .....                                         | 27        |
| 3.3 Energy saving mode .....                              | 10        | 13.7 Adding laundry .....                                                 | 27        |
| <b>4 Installation and connection .....</b>                | <b>10</b> | 13.8 Cancelling the programme ...                                         | 28        |
| 4.1 Unpacking the appliance .....                         | 10        | 13.9 Resuming the programme when the programme status is Rinse Hold ..... | 28        |
| 4.2 Contents of package .....                             | 10        | 13.10 Unloading the laundry .....                                         | 28        |
| 4.3 Requirements for the installation location .....      | 11        | 13.11 Put the appliance into standby mode .....                           | 28        |
| 4.4 Removing the transit bolts .....                      | 11        | <b>14 Childproof lock .....</b>                                           | <b>28</b> |
| 4.5 Connecting the appliance .....                        | 12        | 14.1 Activating the childproof lock .....                                 | 28        |
| 4.6 Aligning the appliance .....                          | 14        | 14.2 Deactivating the childproof lock .....                               | 28        |
| <b>5 Before using for the first time ..</b>               | <b>14</b> | <b>15 Home Connect .....</b>                                              | <b>28</b> |
| 5.1 Starting an empty washing cycle .....                 | 14        | 15.1 Setting up Home Connect .....                                        | 29        |
| <b>6 Familiarising yourself with your appliance .....</b> | <b>16</b> | 15.2 Deactivating Wi-Fi on the appliance .....                            | 29        |
| 6.1 Appliance .....                                       | 16        | 15.3 Activating Wi-Fi on the appliance .....                              | 29        |
| 6.2 Detergent drawer .....                                | 16        | 15.4 Installing the software update .....                                 | 29        |
| 6.3 Control panel .....                                   | 17        | 15.5 Resetting the appliance network settings .....                       | 30        |
| 6.4 Operating logic .....                                 | 17        | 15.6 Remote start .....                                                   | 30        |
| <b>7 Display .....</b>                                    | <b>18</b> |                                                                           |           |
| <b>8 Buttons .....</b>                                    | <b>20</b> |                                                                           |           |
| <b>9 Programmes .....</b>                                 | <b>21</b> |                                                                           |           |
| <b>10 Accessories .....</b>                               | <b>25</b> |                                                                           |           |

|                                           |           |                                                                                             |           |
|-------------------------------------------|-----------|---------------------------------------------------------------------------------------------|-----------|
| 15.7 Data protection .....                | 30        | <b>19 Transportation, storage and disposal .....</b>                                        | <b>41</b> |
| <b>16 Basic settings .....</b>            | <b>30</b> | 19.1 Removing the appliance .....                                                           | 41        |
| 16.1 Overview of the basic settings ..... | 30        | 19.2 Inserting the transit bolts .....                                                      | 41        |
| 16.2 Changing the basic settings .....    | 31        | 19.3 Using the appliance again ....                                                         | 41        |
| <b>17 Cleaning and servicing .....</b>    | <b>31</b> | 19.4 Disposing of old appliance ..                                                          | 41        |
| 17.1 Cleaning the drum .....              | 31        | <b>20 Customer Service .....</b>                                                            | <b>42</b> |
| 17.2 Cleaning the detergent drawer .....  | 32        | 20.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.) ..... | 42        |
| 17.3 Cleaning the drain pump .....        | 33        | <b>21 Consumption values .....</b>                                                          | <b>42</b> |
| 17.4 Cleaning the rubber gasket ..        | 35        | <b>22 Technical data .....</b>                                                              | <b>43</b> |
| <b>18 Troubleshooting .....</b>           | <b>35</b> | 22.1 Information regarding Free and Open Source Software ..                                 | 44        |
| 18.1 Emergency release .....              | 41        | <b>23 Declaration of Conformity .....</b>                                                   | <b>45</b> |



## 1 Safety

Observe the following safety instructions.

### 1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

### 1.2 Intended use

Only use this appliance:

- for washing machine-washable fabrics and hand-washable wool in accordance with the care label.
- with tap water and commercially available detergents and care products suitable for washing machines.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 4000 m above sea level.

## 1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

## 1.4 Safe installation

### **WARNING – Risk of electric shock!**

Incorrect installation is dangerous.

- ▶ Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ▶ Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ▶ The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- ▶ When using a residual current circuit breaker, only use a type with the  mark.
- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.
- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- ▶ Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

**⚠ WARNING – Risk of fire!**

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

**⚠ WARNING – Risk of injury!**

The heavy weight of the appliance may result in injury when lifted.

- ▶ Do not lift the appliance on your own.

If this appliance is not correctly installed in a washer-dryer stack, the installed appliance may fall.

- ▶ Only stack the dryer on a washing machine using the connection kit from the dryer manufacturer. No other installation method is permitted.
- ▶ Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection kit.
- ▶ Do not install appliances from different manufacturers and with varying depths and widths in a washer-dryer stack.
- ▶ Do not install a washer-dryer stack on a platform; the appliances may tip over.

**⚠ WARNING – Risk of suffocation!**

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

**⚠ CAUTION – Risk of injury!**

The appliance may vibrate or move when in use.

- ▶ Place the appliance on a clean, even, solid surface.
  - ▶ Align the appliance using the appliance feet and a spirit level.
- If hoses and power cords have been laid incorrectly, this causes a tripping hazard.
- ▶ Lay hoses and power cords in such a way that there is no risk of tripping.

If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.

- ▶ Do not move the appliance by holding onto protruding parts.

### **CAUTION – Risk of cutting!**

Touching sharp edges on the appliance may lead to cuts.

- ▶ Do not touch the sharp edges on the appliance.
- ▶ Wear protective gloves when installing and transporting the appliance.

## **1.5 Safe use**

### **WARNING – Risk of electric shock!**

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and turn off the water tap.
- ▶ Call customer service. → *Page 42*

An ingress of moisture can cause an electric shock.

- ▶ Only use the appliance in enclosed spaces.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

### **WARNING – Risk of harm to health!**

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ The appliance must not be set up behind a lockable door, a sliding door or a door with a hinge on the side opposite to the appliance, which prevents appliance from opening fully.
- ▶ With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

When spinning larger, waterproof items of laundry, imbalances may arise and lead to injuries.

- ▶ Do not wash and spin larger items of laundry, such as blankets or mattress covers, in the appliance.

**⚠ WARNING – Risk of suffocation!**

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

**⚠ WARNING – Risk of poisoning!**

Detergents and care products may result in poisoning if consumed.

- ▶ If accidentally swallowed, seek medical advice.
- ▶ Keep detergents and care products out of the reach of children.

**⚠ WARNING – Risk of explosion!**

Laundry that has been pretreated with flammable cleaning agents that contain solvents may cause an explosion in the appliance.

- ▶ Rinse pretreated laundry thoroughly with water before washing.

**⚠ CAUTION – Risk of injury!**

The covering plate may break if you stand on or climb onto the appliance.

- ▶ Do not stand on or climb onto the appliance.

The appliance may tip over if you sit on or lean against the open door.

- ▶ Do not sit on or lean against the appliance door.
- ▶ Do not place any objects on the appliance door.

Reaching into the drum while it is still turning may cause hand injuries.

- ▶ Wait for the drum to come to a complete stop before reaching inside.

**⚠ CAUTION – Risk of scalding!**

When you wash at high temperatures, the detergent solution gets hot.

- ▶ Do not touch the hot detergent solution.

**⚠ CAUTION – Risk of chemical burns!**

If the detergent drawer is opened, detergent and care products may spray out from the appliance.

Contact with eyes or skin may cause irritation.

- ▶ Rinse eyes and/or skin thoroughly with clean water if they come into contact with detergents or care products.

- ▶ If accidentally swallowed, seek medical advice.
- ▶ Keep detergents and care products out of the reach of children.

## 1.6 Safe cleaning and maintenance

### **WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Never make any technical modifications to the appliance or its features.
- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

An ingress of moisture can cause an electric shock.

- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

### **WARNING – Risk of injury!**

The use of non-original spare parts and non-original accessories is dangerous.

- ▶ Only use the manufacturer's original spare parts and original accessories.

### **WARNING – Risk of poisoning!**

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

- ▶ Do not use cleaning agents that contain solvents.

---

## 2 Preventing material damage

### **ATTENTION**

The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, de-

tergent, care product or cleaning agent.

- ▶ Follow the dosage recommendations from the manufacturer.

Exceeding the maximum load capacity impairs the function of the appliance.

- ▶ Observe the maximum load capacity for each programme and do not exceed it. → *Page 21*

The appliance is secured for transportation using transit bolts.

Transit bolts which have not been removed may result in material damage and damage to the appliance.

- ▶ Before starting up the appliance, remove the transit bolts completely and keep them in a safe place.
- ▶ Before transport, fit the transit bolts fully in order to prevent damage in transit.

Material damage may be caused if the water inlet hose is connected incorrectly.

- ▶ Tighten the screw connections on the water inlet until they are hand-tight.
- ▶ Connect the water inlet hose directly to the water tap, without any additional connecting elements such as adapters, extensions or valves.
- ▶ Ensure that the inner diameter of the water tap is at least 17 mm.
- ▶ Make sure that the length of the thread on the connection to the water tap is at least 10 mm.

If the water pressure is too high or too low, the appliance may not be able to operate properly.

- ▶ Ensure that the water pressure in the water supply system is at least 100 kPa (1 bar) and max. 1000 kPa (10 bar).
- ▶ If the water pressure exceeds the maximum value specified, a pressure-reducing valve must be installed between the water connection and the hose set of the appliance.
- ▶ Do not connect the appliance to the mixer tap of an unpressurised hot-water boiler.

Modified or damaged water hoses may result in material damage and damage to the appliance.

- ▶ Never kink, crush, modify or cut through water hoses.
- ▶ Only use the water hoses supplied with the appliance or genuine spare hoses.
- ▶ Never re-use water hoses that have been used before.

Operating the appliance using water that is dirty or too hot may lead to material damage and damage to the appliance.

- ▶ Only operate the appliance with cold mains water.

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Clean the appliance with nothing but water and a soft, damp cloth.
- ▶ Remove all detergent residue, spray residue or other residues immediately if they come into contact with the appliance.

---

## **3 Environmental protection and saving energy**

### **3.1 Disposing of packaging**

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

## 3.2 Save energy and conserve resources

If you follow these instructions, your appliance will use less electricity and less water.

- Choose programs with low temperatures and longer wash times and use maximum load capacity.  
→ *Page 21*
- Add detergent based on the laundry's degree of soiling.
- Reduce the washing temperature for lightly and normally soiled laundry.
- Set the maximum spin speed if you want to dry the laundry in the tumble dryer afterwards.

## 3.3 Energy saving mode

If you do not use the appliance for a brief period, it automatically switches to energy-saving mode. All displays go out and — (▷|| Start/Reload) flashes.

Energy-saving mode ends when you use the appliance again.

If you do not use the appliance for an extended period, it automatically switches to standby mode.

---

# 4 Installation and connection

## 4.1 Unpacking the appliance

### ATTENTION

Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appliance.

- ▶ Remove these objects, along with all supplied accessories, from the drum before starting the appliance.

1. Remove any packaging and protective covers completely from the appliance.  
→ *"Disposing of packaging", Page 9*
2. Check the appliance for visible damage.
3. Open the door. → *Page 27*
4. Remove any accessories from the drum.
5. Close the door.

## 4.2 Contents of package

After unpacking all parts, check for any damage in transit and completeness of the delivery.

### ATTENTION

If the appliance is operated with incomplete or defective accessories, the appliance may not be able to operate properly, or this may result in material damage or damage to the appliance.

- ▶ Do not operate the appliance with incomplete or defective accessories.
- ▶ Replace the accessories in question before operating the appliance.  
→ *"Accessories", Page 25*

**Note:** The appliance has undergone a function test at the factory. This may cause water stains in the appliance, which the first wash cycle removes.

The delivery consists of the following:

- Washing machine
- Accompanying documents

- Transit bolts → *Page 11*
- Cover cap<sup>1</sup>
- Water inlet hose → *Page 12*

### 4.3 Requirements for the installation location

#### ⚠ **WARNING**

##### **Risk of electric shock!**

The appliance contains live parts. Touching live parts is dangerous.

- ▶ Do not operate the appliance without a cover cap.

#### ⚠ **WARNING**

##### **Risk of injury!**

When using the appliance on a base, the appliance may tip over.

- ▶ Always secure the feet of the appliance to a base using the manufacturer's fixing brackets → *Page 25* before using the appliance for the first time.

#### **ATTENTION**

If residual water in the appliance freezes, this may cause damage to the appliance.

- ▶ Do not install or operate this appliance anywhere that is liable to experience frost or outdoors.


If the appliance is tilted at an angle greater than 40°, residual water may leak out of the appliance and cause material damage.

- ▶ Tilt the appliance carefully.
- ▶ Transport the appliance in an upright position.

| Installation location | Requirements |
|-----------------------|--------------|
|-----------------------|--------------|


|      |                                                                 |
|------|-----------------------------------------------------------------|
| Base | Secure the appliance with fixing brackets<br>→ <i>Page 25</i> . |
|------|-----------------------------------------------------------------|

| Installation location | Requirements |
|-----------------------|--------------|
|-----------------------|--------------|

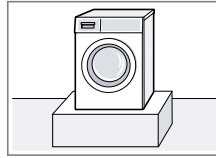


Wooden joist floor

Place the appliance on a water-resistant wooden board (minimum thickness of 30 mm) which is screwed tightly to the floor.

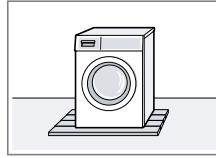


Kitchen unit

Only install the appliance underneath a continuous worktop that is securely connected to adjacent cabinets. Required niche width: 60 cm.

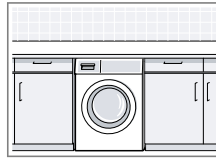

Against a wall

Do not trap the power cord or the hoses between the wall and the appliance.

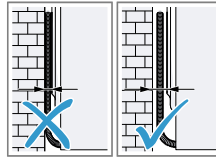


### 4.4 Removing the transit bolts

The appliance is secured for transportation using transit bolts on the rear of the appliance.


**Note:** Keep the transit bolt screws and the sleeves in a safe place for future transport.

<sup>1</sup> The number of cover caps varies depending on the model.


1. Remove the hose ① and the power cord ② from the holders.

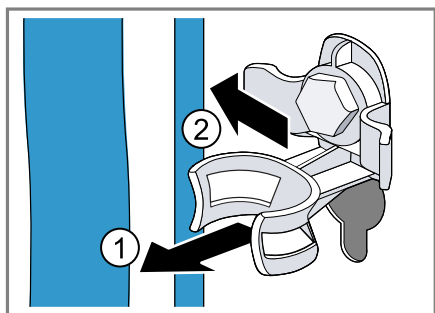

2. Unscrew ① and remove ② all of the screws for the 4 transit bolts using a WAF 13 wrench.

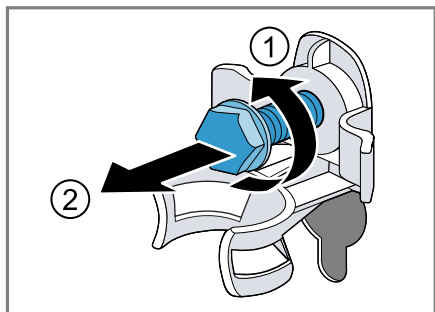

3. Remove the 4 sleeves.

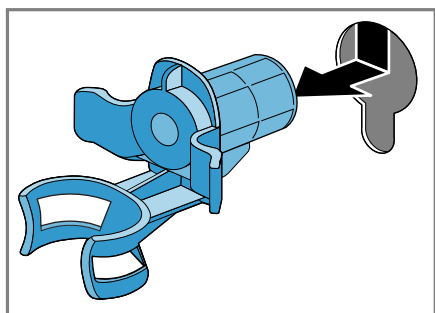


4. Insert the cover cap and push it downwards.


#### Notes

- Note the number of cover caps included in the scope of delivery
- If four cover caps are included in the scope of delivery, insert

the cover caps in the four openings for the transit bolts.

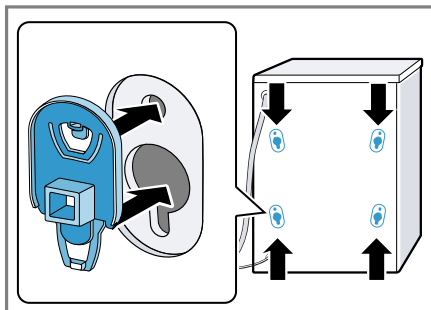

- If one cover cap is included in the scope of delivery, insert the cover cap in the bottom left opening for the transit bolt.

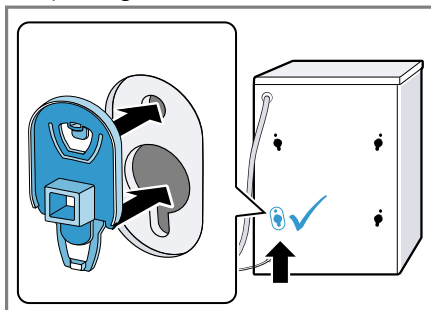

**Note:** To install the transit bolts to transport the appliance, perform these steps again in the reverse order.

## 4.5 Connecting the appliance


### Connecting the water inlet hose

#### ATTENTION


Material damage may be caused if the water inlet hose is connected incorrectly.

- Tighten the screw connections on the water inlet until they are hand-tight.

1. Connect the water inlet hose.

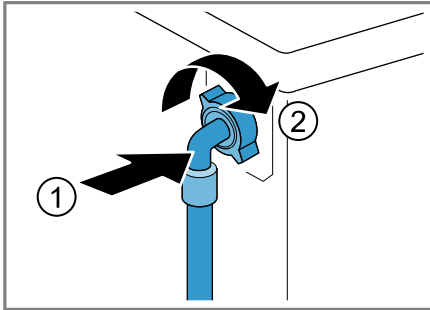

2. Connect the water inlet hose to a tap (26.4 mm = 3/4").

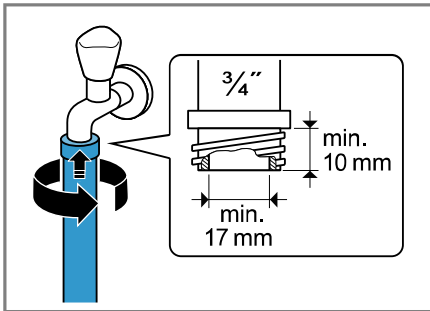

3. Open the water tap carefully and check that the connection points are tight.

### Water outlet connection types

This information is intended to help you to connect this appliance to the water outlet.

#### ATTENTION


When draining, the water outlet hose is subject to water pressure and may come loose from the installed connection point.

- Secure the water outlet hose against unintentional loosening. In the event of a blocked or covered outlet, accumulated wastewater can flow back into the appliance.
- Before operating the appliance, ensure that the wastewater drains

away quickly and eliminate any blockages.


**Note:** Observe the draining heights. The maximum draining height is 100 cm.

#### Siphon

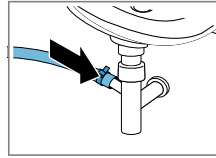


Secure the connection point with a (24–40 mm) hose clamp.

#### Sink

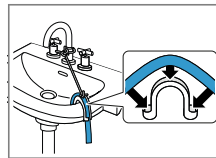

Fix and secure the water outlet hose with an elbow. → "Accessories", Page 25

Plastic pipe with rubber sleeve or gully

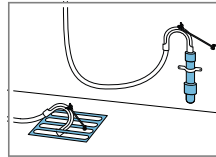

Fix and secure the water outlet hose with an elbow. → "Accessories", Page 25

### Connecting the appliance to the electricity supply

**Note:** Your electrical domestic installation for this appliance must comply with the local legal provisions and safety regulations, and should include a residual current circuit-breaker.


1. Insert the mains plug of the appliance's power cable in a socket nearby. The connection details of the appliance can be found under Technical data → Page 43.
2. Check the mains plug is inserted properly.

en Before using for the first time


## 4.6 Aligning the appliance

In order to reduce noise and vibration and to prevent the appliance from moving, align the appliance correctly.

1. Use a WAF 17 wrench to loosen the lock nuts in a clockwise direction.

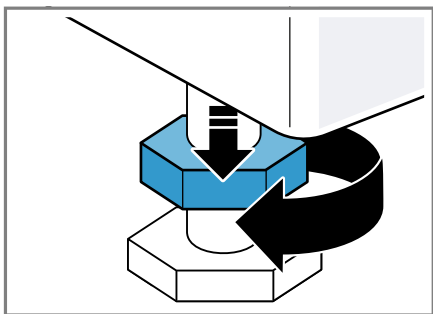


2. To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

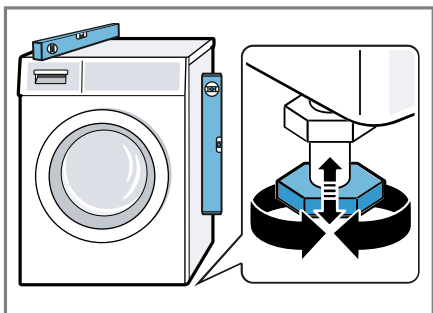

All appliance feet must stand firmly on the ground.

3. Use a WAF 17 wrench to tighten the lock nuts against the housing until they are hand-tight.

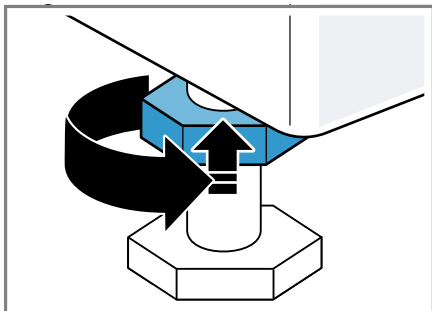

In doing so, hold the foot tight and do not adjust its height.

## 5 Before using for the first time


Prepare the appliance for use.

### 5.1 Starting an empty washing cycle


Your appliance was inspected thoroughly before leaving the factory. To remove any residual water, run the first wash cycle without any laundry.

1. Select the **Cottons**  . 90° programme or a programme for drum cleaning. → *Page 31*
2. Close the door.
3. Pull out the detergent drawer.

4. Pour approx. 1 litre of tap water into compartment II.

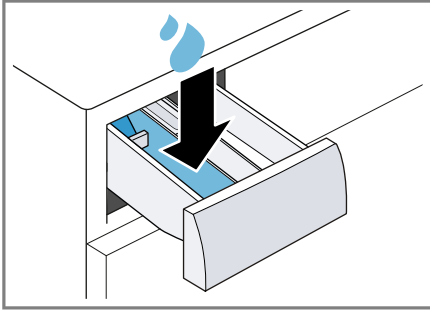

5. Add washing powder containing oxygen bleach to compartment II.

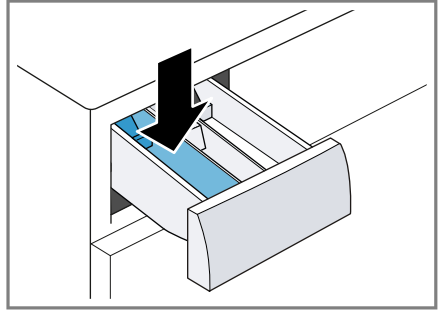


To prevent foaming, use only half of the amount of detergent recommended by the detergent manufacturer for light soiling. Do not use detergent suitable for woollens or delicates.

6. Push in the detergent drawer.
7. Start the programme. → *Page 27*
8. Start the first wash cycle or set the programme selector to **Off** to switch off the appliance.  
→ *"Basic operation", Page 26*

## 6 Familiarising yourself with your appliance

### 6.1 Appliance

You can find an overview of the parts of your appliance here.

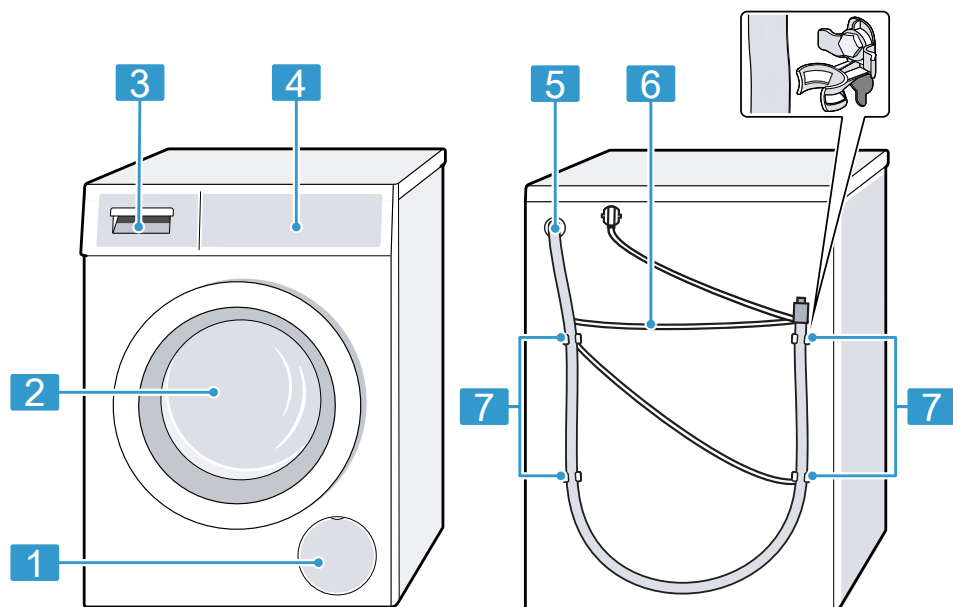

On certain models, specific details such as the colour and shape may differ from those pictured.


- |   |                                                      |
|---|------------------------------------------------------|
| 1 | Maintenance flap for the drain pump → <i>Page 33</i> |
| 2 | Door → <i>Page 27</i>                                |
| 3 | Detergent drawer → <i>Page 16</i>                    |

- |   |                                    |
|---|------------------------------------|
| 4 | Control panel → <i>Page 17</i>     |
| 5 | Water outlet hose → <i>Page 13</i> |
| 6 | Power cord → <i>Page 13</i>        |
| 7 | Transit bolts → <i>Page 11</i>     |

### 6.2 Detergent drawer

**Note:** Observe the manufacturer's instructions on the use and dosage of the detergent and care product and


the information in the programme descriptions.

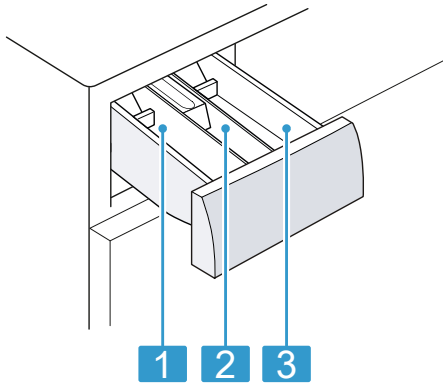

- |          |                                                                                                                 |
|----------|-----------------------------------------------------------------------------------------------------------------|
| <b>1</b> | Compartment II: Detergent for the main wash                                                                     |
| <b>2</b> | Compartment  : Fabric softener |
| <b>3</b> | Compartment I: Detergent for prewash                                                                            |

## 6.3 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

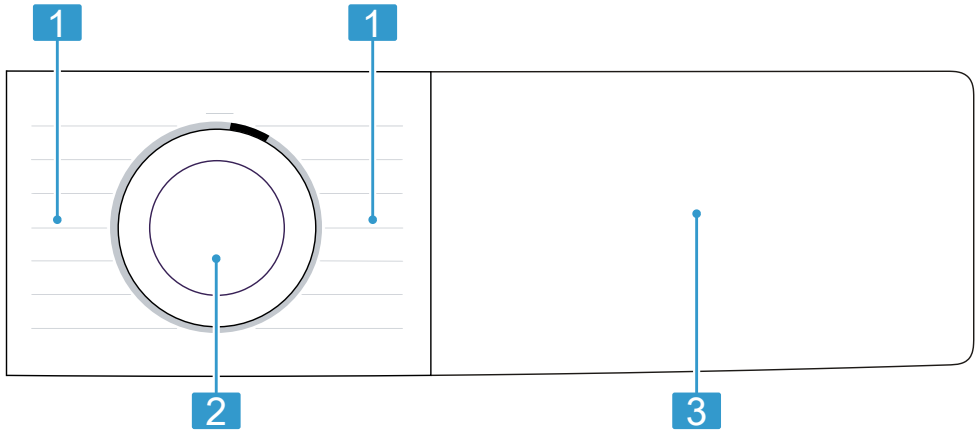

- |          |                                                          |
|----------|----------------------------------------------------------|
| <b>1</b> | Programmes → <i>Page 21</i>                              |
| <b>2</b> | Programme selector<br>→ <i>Page 26</i>                   |
| <b>3</b> | Buttons → <i>Page 20</i> and display<br>→ <i>Page 18</i> |

activate, deactivate or change settings by pressing the buttons. The activated settings are highlighted brightly on the display.

### ATTENTION

Pressing on the display with force may cause damage.

- ▶ Do not apply heavy pressure on the display.

## 6.4 Operating logic

Some areas of the display are buttons and respond to touch. You can

en    Display


- ▶ Do not press on the display using pointed or sharp objects.

## 7 Display

The display shows the current settings, options or relevant information. Depending on the programme status, the display shows some information in the 8:88 area, e.g. End.

**Note:** Additional functions may be available as a result of software updates.  
→ *Page 29*

If a software update is available, you can find further information in the Home Connect app.

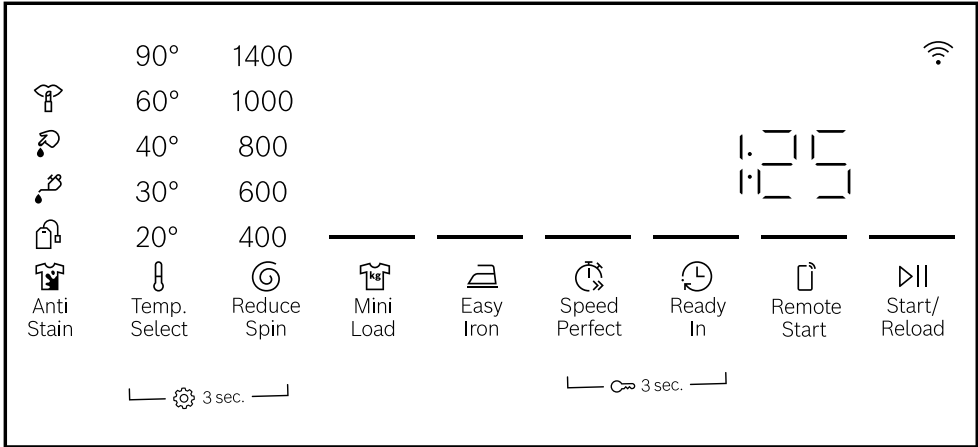

Example: Display

| Display               | Description                                                                             |
|-----------------------|-----------------------------------------------------------------------------------------|
| 00:40 <sup>1</sup>    | Expected programme duration or programme time remaining in hours and minutes.           |
| max 11.0 <sup>1</sup> | Recommendation for the maximum load capacity for the selected program in kg.            |
| 🌀 - 1400              | Set spin speed in rpm.<br>🌀: No final spin, only draining<br>🌀: Rinse Hold, no draining |
| 🌡 - 90                | Set temperature in °C. → <i>Page 20</i><br>🌡 (cold)                                     |
| ▶   Start/Re-load)    | Start, cancel or pause                                                                  |

<sup>1</sup> Example

| Display                                                                                               | Description                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                       | <ul style="list-style-type: none"> <li>■ Lights up: The programme is running and can be cancelled or paused.</li> <li>■ Flashes: The programme can be started or continued.</li> </ul>                           |
| End                                                                                                   | Programme status: Programme end                                                                                                                                                                                  |
|                        | Programme status: Crease-reduction function                                                                                                                                                                      |
|                        | <ul style="list-style-type: none"> <li>■ Lights up: The childproof lock is activated.</li> <li>■ Flashes: The childproof lock is activated and the appliance has been operated. → <i>Page 28</i></li> </ul>      |
| — (  Easy Iron)      | The crease-reduction function is activated. → <i>Page 21</i>                                                                                                                                                     |
|  Steaming              | Warming and steaming of the laundry using steam is activated.                                                                                                                                                    |
|                        | You can remove or add laundry, and interrupt the current programme. → <i>Page 27</i>                                                                                                                             |
|                        | Rinse Hold is activated.                                                                                                                                                                                         |
| — (  Speed Perfect)  | Shortened programme duration is activated. → <i>Page 20</i>                                                                                                                                                      |
| — (  Mini Load)      | Washing small loads of washing or individual items of laundry is activated. → <i>Page 21</i>                                                                                                                     |
|                        | The "Blood" stain type is activated.                                                                                                                                                                             |
|                        | The "Cosmetics" stain type is activated.                                                                                                                                                                         |
|                        | The "Cooking fat/cooking oil" stain type is activated.                                                                                                                                                           |
|                        | The "Tea" stain type is activated.                                                                                                                                                                               |
|                        | Change the basic settings. → <i>Page 31</i>                                                                                                                                                                      |
|                        | Flashes: Drum cleaning is required. Run the Cottons 90° programme for cleaning and caring for the drum and the outer tub. → <i>Page 31</i>                                                                       |
| — (  Remote Start) | Remote start is activated. → <i>Page 20</i>                                                                                                                                                                      |
|                      | <ul style="list-style-type: none"> <li>■ Lights up: The appliance is connected to your home network via Wi-Fi.</li> <li>■ Flashes: The appliance is trying to connect to your home network via Wi-Fi.</li> </ul> |
|                      | Settings that are not available on the appliance have been set via the Home Connect app.<br>You can find more information in the Home Connect app.                                                               |
|                      | The appliance has detected too much foam. → <i>Page 38</i>                                                                                                                                                       |

| Display                                                                          | Description                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"> <li>■ Lights up: The door is locked. <ul style="list-style-type: none"> <li>– To add laundry, the door can be unlocked if  lights up. → <i>Page 27</i></li> <li>– To open the door, you can cancel the programme. → <i>Page 28</i></li> </ul> </li> <li>■ Flashes: The door is not closed properly.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>■ No water pressure. → <i>Page 36</i></li> <li>■ The water pressure from the tap is too low.</li> </ul>                                                                                                                                                                                                                                                                                     |
| E:35 <sup>1</sup>                                                                | Error code, error display, signal. → <i>Page 35</i>                                                                                                                                                                                                                                                                                                                                                                                |

## 8 Buttons

### Notes

- Additional functions may be available as a result of software updates.  
→ *Page 29*  
If a software update is available, you can find further information in the Home Connect app.
- You can find additional functions or settings in the Home Connect app.  
You can change some settings using the Home Connect app.

The selection of programme settings depends on the programme that is set.

| Button                                                                                          | Description                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ▷   Start/Reload                                                                                | Start, cancel or pause the programme.                                                                                                                                                                                                                     |
|  Speed Perfect  | Activate or deactivate a shorter programme duration.<br><b>Note:</b> The energy consumption increases. The washing result is not affected by this.                                                                                                        |
|  Anti Stain   | Select the type of stain.<br>The temperature, drum movement and soaking time are all adjusted to suit the type of stain.                                                                                                                                  |
|  Temp. Select | Adjust the temperature.                                                                                                                                                                                                                                   |
|  Reduce Spin  | Adjust the spin speed or deactivate the spin cycle.<br>If  is selected, the water is drained and the spin cycle is deactivated. The laundry stays wet inside the drum. |
|  Remote Start | If you press the button briefly, you can activate or deactivate remote start. → <i>Page 30</i><br>If you press and hold the button for approx. 3 seconds, the Home Connect settings open. → <i>Page 28</i>                                                |
|  3 sec.       | Activate or deactivate the childproof lock. → <i>Page 28</i>                                                                                                                                                                                              |

<sup>1</sup> Example

| Button                                                                                    | Description                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  3 sec.    | Call up the basic settings. → <i>Page 30</i>                                                                                                                                                                   |
|  Mini Load | Wash small loads of delicate or hard-wearing fabrics. The programme duration is shortened, the water and energy consumption adjusted and the maximum load capacity reduced to 0.5 kg.                          |
|  Easy Iron | Activate or deactivate the reduced creasing programme. The spin cycle and the spin speed are adapted. The laundry has a higher residual moisture after washing. Hang up the laundry immediately after washing. |

## 9 Programmes

### Notes

- The laundry's care labels provide you with additional information about programme selection.  
→ *"Care symbols on the care labels", Page 26*
- The programme's temperature setting guarantees that the recommended temperature on the care label is not exceeded. The temperature that is reached in the appliance may differ from the set temperature. This means that the best possible washing performance is achieved with optimal energy efficiency.
- Additional functions may be available as a result of software updates.  
→ *Page 29*  
If a software update is available, you can find further information in the Home Connect app.

| Programme                                                                                     | Description                                                                                                                                                                                                                                                                                                                                             | Max. load (kg)           |
|-----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|
| Cottons  . | Wash hard-wearing items made from cotton or linen.<br>Also suitable as a short programme for normally soiled laundry when you activate  Speed Perfect.<br>Programme setting: <ul style="list-style-type: none"> <li>■ Max. 90 °C</li> <li>■ Max. 1400 rpm</li> </ul> | 10.0<br>5.0 <sup>1</sup> |
| Eco 40-60                                                                                     | Wash items made from cotton or linen.                                                                                                                                                                                                                                                                                                                   | 11.0                     |

<sup>1</sup>  **Speed Perfect** activated

| Programme                                                                                                                                                                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Max. load (kg) |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
|                                                                                                                                                                            | <p><b>Note:</b> Fabrics which can be washed from 40 °C  up to 60 °C  as per the care symbol can be washed together.</p> <p>The washing performance corresponds to the best possible washing performance class according to the legal requirements.</p> <p>For this programme, the washing temperature is automatically adjusted depending on the load size, in order to achieve the best possible energy efficiency with the best possible washing result. You cannot change the washing temperature.</p> <p>The maximum spin speed is 1400 rpm.</p> |                |
| Easy Care                                                                                 | <p>Wash items made from synthetic fabrics.</p> <p>Programme setting:</p> <ul style="list-style-type: none"> <li>■ Max. 60 °C</li> <li>■ Max. 1400 rpm</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | 4.0            |
| Mix                                                                                       | <p>Wash items made from cotton, linen or synthetic fabrics.</p> <p>Suitable for lightly soiled laundry.</p> <p>Programme setting:</p> <ul style="list-style-type: none"> <li>■ Max. 60 °C</li> <li>■ Max. 1400 rpm</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 4.0            |
| Delicates/Silk                                                                            | <p>Wash delicate, washable items made from silk, viscose and synthetic fabrics.</p> <p>Use a detergent that is suitable for delicates or silk.</p> <p><b>Note:</b> Wash especially delicate items or items with hooks, eyelets or clips in a mesh laundry bag.</p> <p><b>Tip:</b> Gently cleaning the laundry reduces abrasion of textile fibres and microplastic fibres.</p> <p>Programme setting:</p> <ul style="list-style-type: none"> <li>■ Max. 40 °C</li> <li>■ Max. 800 rpm</li> </ul>                                                                                                                                                                                                                         | 2.0            |
|  Wool  | <p>Hand- or machine-washable items that are made from wool or contain wool.</p> <p>To prevent the laundry from shrinking, the drum moves the items very gently with long pauses.</p> <p>Use a detergent that is suitable for wool.</p> <p>Programme setting:</p> <ul style="list-style-type: none"> <li>■ Max. 40 °C</li> <li>■ Max. 800 rpm</li> </ul>                                                                                                                                                                                                                                                                                                                                                                | 2.0            |

| Programme                                                                                        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Max. load (kg) |
|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
|  Rinse .          | Rinse and then spin the laundry, and drain the water.<br>Programme setting: Max. 1400 rpm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | –              |
|  Spin/<br>Drain . | Spin the laundry and drain the water.<br>If you only want to drain the water, activate  . The laundry is not spun.<br>Programme setting: Max. 1400 rpm                                                                                                                                                                                                                                                                                                                                                                               | –              |
| App             | Select additional programmes directly via the Home Connect app.<br>A description of the programmes can be found in the Home Connect app.<br><b>Note:</b> Your appliance must be connected to your home network and registered in your Home Connect app. → <i>Page 28</i>                                                                                                                                                                                                                                                                                                                                              | –              |
|  AllergyPlus .    | Wash hard-wearing items made from cotton or linen.<br>Suitable for allergy sufferers and for strict hygiene requirements.<br><b>Note:</b> Once the set temperature has been reached, it remains constant throughout the entire washing process.<br>Programme setting:<br><ul style="list-style-type: none"> <li>■ Max. 60 °C</li> <li>■ Max. 1400 rpm</li> </ul>                                                                                                                                                                                                                                                      | 6.0            |
|  Steam           | Suitable for shirts, T-shirts and similar fabrics made from cotton or linen.<br>Programme for warming and steaming dry items using steam in order to hang them up once the programme has ended or to make them easier to iron.<br>The programme's maximum load is five shirts or five t-shirts.<br>Activate  Mini Load if you only want to steam one item of laundry.<br>Activate  Speed Perfect if you only want to steam one item of laundry. | – <sup>1</sup> |

<sup>1</sup> Washing not possible

| Programme                                                                                           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Max. load (kg)          |
|-----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
|                                                                                                     | <b>Notes</b> <ul style="list-style-type: none"> <li>■ Immediately after the programme ends, hang up the warm, steamed items or iron them.</li> <li>■ The laundry is not washed or cleaned. Do not use any detergent or cleaning products.</li> <li>■ The steam is hot and may cause damage to certain fabrics or fabric types.<br/>The programme is therefore not suitable for outdoor clothing or items made from silk or wool, such as jumpers.</li> </ul>                                            |                         |
|  Duvet .             | <p>Wash pillows or quilts stuffed with synthetic fibres or down fillings.<br/>Wash large items separately.<br/>Use a detergent that is suitable for down or delicates.<br/>Use sparingly.<br/>Do not use fabric softener.</p> <p><b>Note:</b> To prevent excessive foaming, remove air from laundry items by rolling them up before you wash them.</p> <p>Programme setting:</p> <ul style="list-style-type: none"> <li>■ Max. 60 °C</li> <li>■ Max. 1000 rpm</li> </ul>                                | 2.5                     |
|  Curtains .          | <p>Wash curtains and blinds.<br/>Programme for washing heavy curtains up to the maximum load for the programme or lightweight curtains measuring 25-30 m<sup>2</sup>.<br/>In order to prevent intensive foaming, use a detergent suitable for curtains when washing lightweight curtains.</p> <p><b>Note:</b> Remove the curtain hooks or wash the curtains in a mesh laundry bag.</p> <p>Programme setting:</p> <ul style="list-style-type: none"> <li>■ Max. 40 °C</li> <li>■ Max. 800 rpm</li> </ul> | 4.0                     |
|  Super 15' / 30' . | <p>Wash items made from cotton or synthetic fabrics.<br/>Short programme for small items of lightly soiled laundry.</p>                                                                                                                                                                                                                                                                                                                                                                                 | 4.0<br>2.0 <sup>1</sup> |

<sup>1</sup>  **Speed Perfect** activated

| Programme | Description                                                                                                                                                                                                                                                                                                                                                                         | Max. load (kg) |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
|           | <p>The programme duration is approx. 30 minutes. If you wish to reduce the programme duration to 15 minutes, activate  Speed Perfect. The maximum load is reduced to 2.0 kg.</p> <p>Programme setting:</p> <ul style="list-style-type: none"> <li>■ Max. 40 °C</li> <li>■ Max. 1000 rpm</li> </ul> |                |

## 10 Accessories

Use original accessories. These have been made especially for your appliance.

|                             | Use                                                                      | Order number |
|-----------------------------|--------------------------------------------------------------------------|--------------|
| Water inlet hose extension  | Extend the water inlet hose for cold water or AquaStop (approx. 2.50 m). | WMZ2381      |
| Water outlet hose extension | Extend the water outlet hose (2.20 m).                                   | 11057910     |
| Fixing brackets             | Improves the stability of the appliance.                                 | WMZ2200      |
| Elbow                       | Secure the water outlet hose in place.                                   | 00655300     |

## 11 Laundry

### 11.1 Preparing the laundry

#### ATTENTION

Objects remaining in the laundry may damage the laundry and the drum.

- Remove all items from any pockets in your laundry before using the appliance.

#### Note

The appliance and fabrics are protected when you prepare your laundry.

- Brush off sand and soil
- Sort the laundry according to colour and textiles and observe the care labels
- Close all zips, hook and loop fasteners, hooks and eyes

- Tie cloth belts, cloth straps and cords together
- Remove curtain fittings and lead strips
- Wash small or particularly delicate items in a mesh washing bag
- Wash large and small items of laundry together
- Wash laundry with fresh stains immediately
- Pretreat laundry with dried stains and wash several times
- Load the laundry unfolded into the drum
- Before loading the drum, any laundry that has been pre-treated with chlorine bleach should be rinsed several times

## 11.2 Care symbols on the care labels

### Washing care symbols

| Symbol                                                                                                                                                                                                                                               | Recommended programme                                    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
|    | Cottons (normal)                                         |
|                                                                                                                                                                      |                                                          |
|    | Easy Care (gentle)                                       |
|                                                                                     | Delicates/Silk for washing by hand (particularly gentle) |
|                                                                                                                                                                      | Woollens (hand wash)                                     |
|                                                                                                                                                                      | (not suitable for machine-washing)                       |

## 12 Detergents and care products

You can protect your appliance and your laundry by selecting and using the correct detergents and care products.

The manufacturer's instructions for use and dosage can be found on the packaging.

### Notes

- When using liquid detergents, only use liquid detergents that are self-flowing
- Do not mix different liquid detergents
- Do not mix detergent and fabric softener
- Do not use products that have expired or are highly congealed
- Do not use products containing solvents, caustic agents or volatile substances
- Do not use chlorine bleach
- Do not use dyes regularly as fixing salt can damage stainless steel

- Do not use color-bleaching agents in the appliance

## 13 Basic operation

### 13.1 Switching on the appliance

**Note:** If you switch the appliance on the first time after you have connected it to the electrical system, the switch-on process takes up to one minute.

**Requirement:** The appliance has been correctly installed and connected. → *Page 10*

- ▶ Turn the programme selector to a programme.

### 13.2 Setting a programme

1. Turn the programme selector and set the required programme.  
→ *Page 21*
- ✓ The display shows the programme settings.
2. If required, adjust the programme settings. → *Page 20*  
Observe the information about operating logic → *Page 17*.  
The programme settings are not saved permanently for the programme.

### Setting additional programmes


**Requirement:** Home Connect is set up. → *Page 29*

1. Set the **App**  programme.
- ✓  **Remote Start** flashes.
2. Press  **Remote Start**.
- ✓ The Home Connect app displays the programmes that can be selected.
3. Set a programme in the Home Connect app.


4. If required, adjust the programme settings. → *Page 20*
5. Start the programme. → *Page 27*

### 13.3 Opening the door

1. Grip under the door handle and pull on the door.

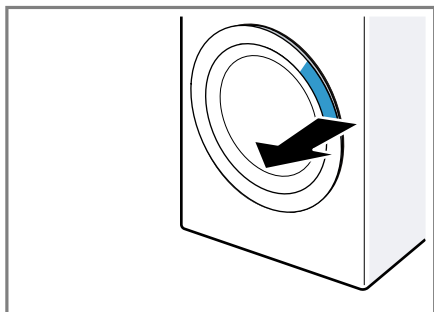

2. Open the door.

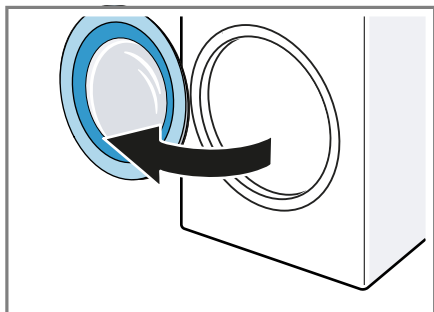

### 13.4 Loading laundry

**Note:** To prevent creasing, note the maximum load for the programmes.  
→ *Page 21*

#### Requirements

- The laundry is prepared and sorted. → *Page 25*
  - The drum is empty.
1. Open the door. → *Page 27*
  2. Place the laundry in the drum.
  3. Close the door.  
Ensure that there is no laundry trapped in the door.

### 13.5 Adding detergent and care product

**Note:** Observe the information about detergents and care products  
→ *Page 26*.

1. Pull out the detergent drawer.
2. Pour in the detergent.  
→ *"Detergent drawer", Page 16*
3. If required, add the care product.
4. Push in the detergent drawer.

### 13.6 Starting the programme

#### Requirements

- A programme is set. → *Page 26*
- The door is closed.
- ▶ Press **▷|| Start/Reload**.
- ✓ The drum rotates and load detection takes place. This can take up to 2 minutes, after which water enters the drum.
- ✓ The display shows the programme duration or the programme end time.
- ✓ After the programme has ended, the display shows: "End".

**Note:** If you do not remove the laundry once the programme has ended, the crease-reduction function starts after 15 minutes and takes approx. 30 minutes. The display shows  and a notification to cancel the programme.  
Press a button on the display to cancel the crease-reduction programme and to remove the laundry.

### 13.7 Adding laundry

After the programme starts, you can remove or add laundry depending on the programme status.

1. Press **▷|| Start/Reload**.

The appliance pauses.

**Note:** If you want to add laundry, follow the instructions on the display. → *Page 19*

## en Childproof lock

2. Open the door. → *Page 27*
3. Add or remove laundry.
4. Close the door.
5. Start the programme. → *Page 27*

### 13.8 Cancelling the programme

1. Press **▷|| Start/Reload**.
2. Open the door. → *Page 27*  
The appliance door remains locked for safety reasons if the temperature and water levels are high.
  - If the temperature is high, start the **Rinse** . programme.
  - If the water level is high, start the **Spin** . programme or select a suitable programme for draining. → *Page 21*
3. Remove the laundry. → *Page 28*

### 13.9 Resuming the programme when the programme status is Rinse Hold

#### Requirements

- Rinse Stop is activated.
  - The last rinse cycle of the set programme has ended and the laundry is in the rinsing water.
1. Set the **Spin** . programme or a programme for draining the water. → *Page 21*
  2. Press **▷|| Start/Reload**.

### 13.10 Unloading the laundry

1. Open the door. → *Page 27*
2. Remove the laundry from the drum.

### 13.11 Put the appliance into standby mode

1. Turn the programme selector to **Off**.

2. Turn off the tap.
3. Cleaning the rubber gasket.  
→ *Page 35*

**Note:** Leave the appliance door and the detergent drawer open to dry.

---

## 14 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

### 14.1 Activating the childproof lock

- ▶ Press on both **↻ 3 sec.** buttons for approx. three seconds.
- ✓ The display shows **↻**.
- ✓ The control elements are locked.
- ✓ The childproof lock also remains activated when the appliance is in standby mode and in the event of a power cut.

### 14.2 Deactivating the childproof lock

**Requirement:** To deactivate the childproof lock, the appliance must be switched on.

- ▶ Press on both **↻ 3 sec.** buttons for approx. three seconds.
- ✓ **↻** goes out on the display.

---

## 15 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of the Home Connect services in your coun-

try. You can find information about this at: [www.home-connect.com](http://www.home-connect.com). The Home Connect app guides you through the entire login process. Follow the instructions, noting the information in the Home Connect app.


### Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.  
→ "Safety", Page 3
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.

## 15.1 Setting up Home Connect

**Requirement:** The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.

1. Scan the following QR code.

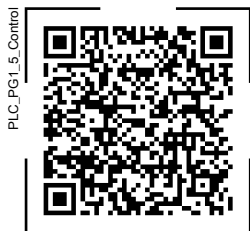

You can install the Home Connect app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect app.

## 15.2 Deactivating Wi-Fi on the appliance

1. Press and hold **Remote Start** for approx. 3 seconds.

2. Press **Remote Start** repeatedly until the display shows "on".
  3. Press **Start/Reload** to deactivate the Wi-Fi.
- ✓ The display shows "oFF".

**Note:** To exit the Home Connect settings, press and hold **Remote Start** for approx. 3 seconds.

## 15.3 Activating Wi-Fi on the appliance

1. Press and hold **Remote Start** for approx. 3 seconds.
  2. Press **Remote Start** repeatedly until the display shows "oFF".
  3. Press **Start/Reload** to activate the Wi-Fi.
- ✓ The display shows "on".

### Notes

- If the Wi-Fi is activated, the display alternately shows "on" and the signal strength of the Wi-Fi connection.
- To exit the Home Connect settings, press and hold **Remote Start** for approx. 3 seconds.

## 15.4 Installing the software update

**Note:** If a software update is available, a message appears in the Home Connect app.

- ▶ To install the software update, follow the instructions in the Home Connect app.
- ✓ The control panel is partially locked during the installation.
- ✓ In the event of a malfunction, installation may take up to 40 minutes. Do not reset the network settings or the appliance to the factory settings.

## 15.5 Resetting the appliance network settings

1. Press and hold  **Remote Start** for approx. 3 seconds.
  2. Press  **Remote Start** repeatedly until the display shows "rES".
  3. Press and hold  **Start/Reload** for approx. 3 seconds.
- ✓ The network settings are reset.

## 15.6 Remote start

Enable the appliance for remote start via the Home Connect app.

### Note

Remote start will be deactivated in the following circumstances:

- The appliance door is opened.
- Following a power cut.

## Activating remote start

**Requirement:** The appliance door is closed.

- ▶ Press  **Remote Start**.
- ✓ — ( Remote Start) lights up and the appliance is enabled for remote start via the Home Connect app.

## Deactivating remote start

- ▶ Press  **Remote Start**.
- ✓ — ( Remote Start) goes out.

## 15.7 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the in-

stalled Wi-Fi communication module).

- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

**Note:** Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

---

## 16 Basic settings


You can configure the basic settings for your appliance to meet your needs.

**Note:** You can also adjust the basic settings in the Home Connect app.

### 16.1 Overview of the basic settings

**Note:** Additional functions may be available as a result of software updates. → *Page 29*

If a software update is available, you can find further information in the Home Connect app.

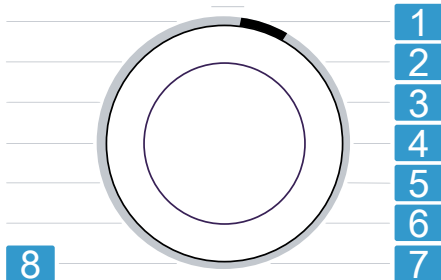

Programme selector with programme positions

- |          |                                                                                                           |
|----------|-----------------------------------------------------------------------------------------------------------|
| <b>1</b> | Set the volume of the signal at the end of the programme:<br>A: 0 (off) to A: 4 (very loud)               |
| <b>2</b> | Set the volume of the signal tone emitted when the buttons are pressed:<br>b: 0 (off) to b: 4 (very loud) |
| <b>3</b> | Set the display brightness:<br>C: 1 (low) to C: 4 (very high)                                             |
| <b>4</b> | Start the programme for cleaning and caring for the drum (dc).                                            |
| <b>5</b> | Activate (d:on) or deactivate (d:OFF) the reminder to clean the drum.                                     |
| <b>6</b> | Activate (E:on) or deactivate (E:OFF) the crease-reduction function.                                      |
| <b>7</b> | Once the programme has ended, the drum moves the laundry at regular intervals to prevent creasing.        |
| <b>7</b> | Display the number of finished programmes (PC).                                                           |
| <b>8</b> | Restore the appliance to the factory settings (rES).                                                      |

## 16.2 Changing the basic settings

- To call up the basic settings, press and hold both buttons **3 sec.** for approximately 3 seconds.  
✓ The display shows .
- Use the programme selector to select the required basic setting.  
→ *Page 30*
- Adjust the basic setting:
  - ▶ To change the value, press **Ready in.**
  - ▶ To reset the appliance to the factory settings, press and hold **Start/Reload** for approx. 3 seconds.
  - ▶ Press **Start/Reload** to start the Drum Clean.
- To exit the basic settings, press any button except for **Ready in** or **Start/Reload**.

## 17 Cleaning and servicing

### 17.1 Cleaning the drum

Clean the drum if you have carried out 20 washing cycles at a temperature of 40 °C or lower, if flashes, or if you have not used the appliance for a prolonged period, but at least once a year.

#### **CAUTION**

#### **Risk of injury!**

Permanently washing at low temperatures and a lack of ventilation for the appliance may damage the drum and cause injury.

- ▶ Regularly run a programme for cleaning the drum or wash at temperatures of at least 60 °C.
- ▶ Leave the appliance to dry after every operation with the door

open, and leave the detergent drawer to dry.


- ▶ Select the drum cleaning programme in the Home Connect app or in the Basic settings → *Page 30*. Run the programme without laundry but with washing powder that contains oxygen bleach or a cleaning agent for caring for the inside of the appliance.

## 17.2 Cleaning the detergent drawer


**Note:** Scan the QR code to see an animation of the process.




1. Pull out the detergent drawer.
2. Press down on the insert and remove the detergent drawer.

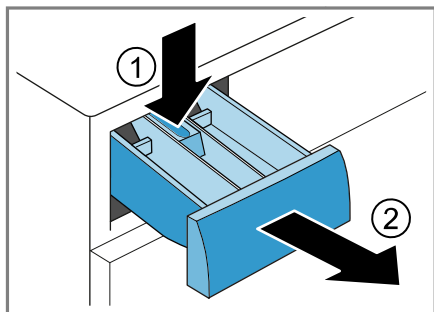


3. Pull out the insert upwards.

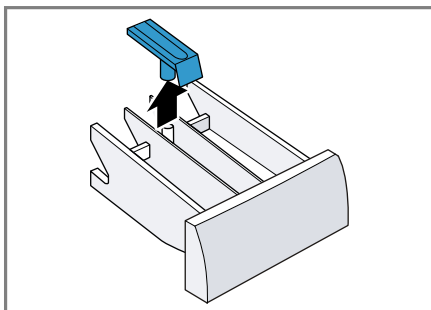


4. Clean the detergent drawer and insert with water and a brush, and then dry them.

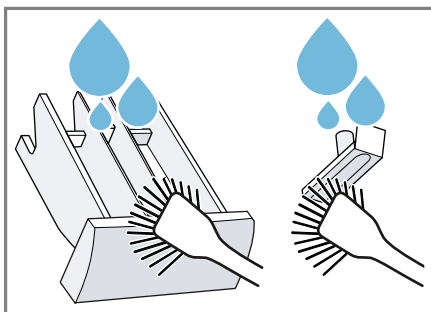

5. Fit the insert and click it into place.

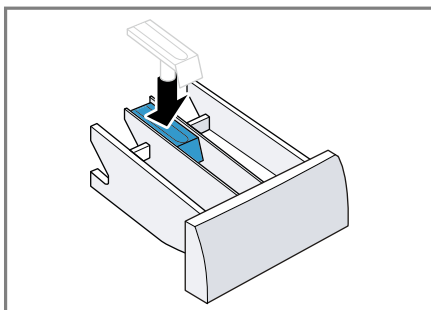

6. Clean the opening for the detergent drawer.

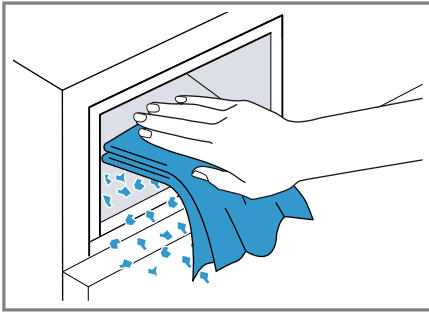

7. Push in the detergent drawer.

### 17.3 Cleaning the drain pump

Clean the drain pump regularly, at least once a year, as well as in the event of faults, e.g. blockages or rattling noises.


**Note:** Scan the QR code to see an animation of the process. Observe the following safety instructions before you start the animation.




#### Emptying the drain pump

1. Turn off the tap.
2. Put the appliance into standby mode. → *Page 28*
3. Disconnect the appliance's mains plug from the power supply.


4. Open and remove the maintenance flap.

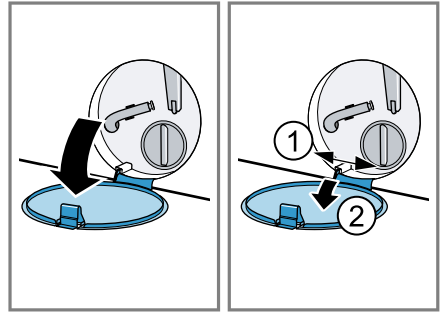

5. Slide a suitable receptacle under the opening for draining the detergent solution.

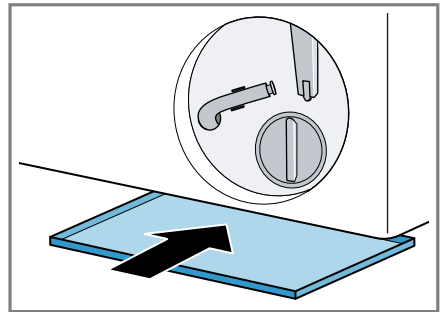


6. Take the drain hose out of the holder.

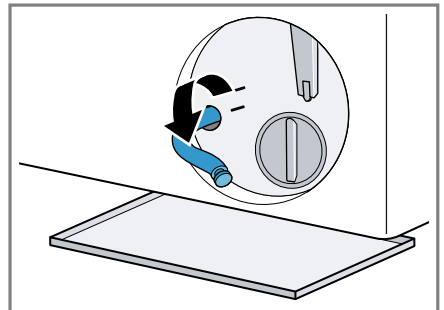


7. **⚠ CAUTION – Risk of scalding!**  
When you wash at high temperatures, the detergent solution gets hot.  
► Do not touch the hot detergent solution.


To allow the detergent solution to flow out into the container, remove the sealing cap.

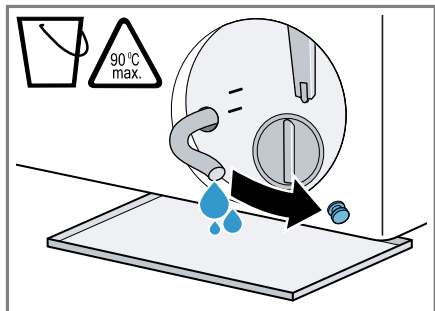

8. Once emptied, press firmly on the locking cap.

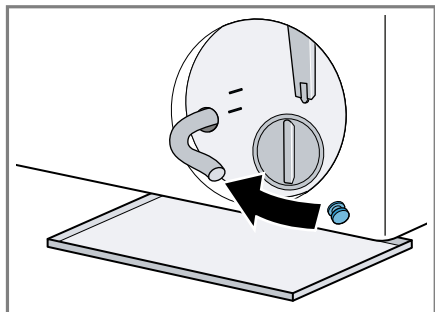


9. Insert the drain hose into the holder.

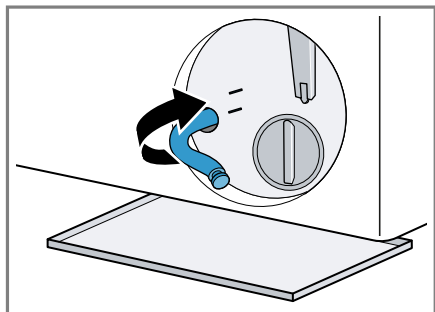

### Cleaning the drain pump


**Requirement:** The drain pump is empty. → Page 33

1. Since water may remain in the drain pump, unscrew the pump cap carefully.
- ▶ The filter insert in the pump housing may become stuck due to coarse particles of dirt. Loosen the dirt and remove the filter insert.

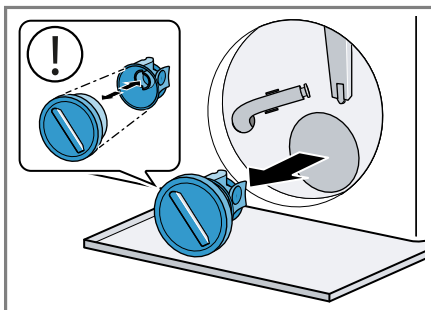


The pump cap is comprised of two parts which can be taken apart for cleaning.


2. Clean the interior, the thread on the pump cap and the pump housing.

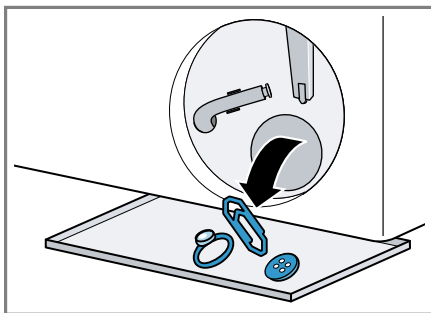

3. Insert the pump cap.
  - Ensure that the parts of the pump cap are correctly assembled.

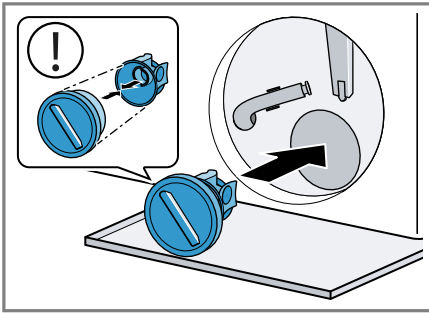


4. Screw the pump cap as far as it will go.

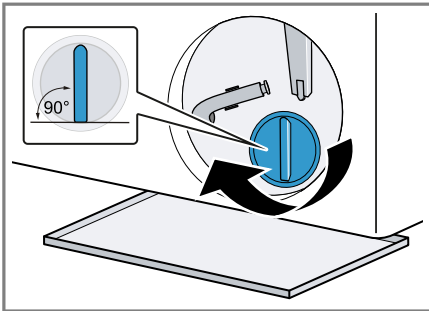

The handle on the pump cap must be in a vertical position.


5. Insert and close the maintenance flap.

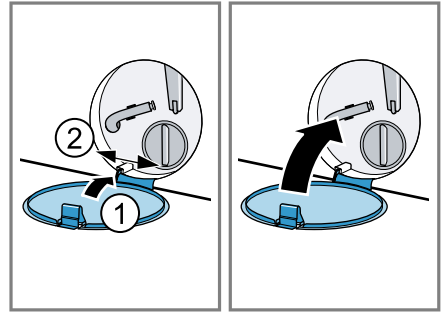

## 17.4 Cleaning the rubber gasket

Clean the rubber gasket regularly.

1. Open the door. → *Page 27*
2. Remove any foreign objects and fluff from the rubber gasket.

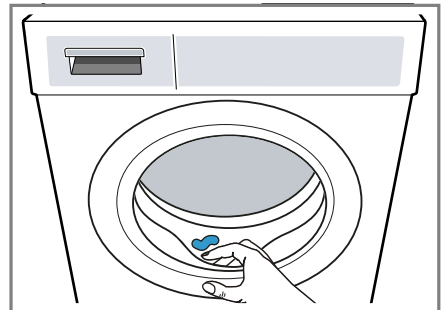

3. Clean the outside and the inside of the rubber gasket with a damp cloth and wipe dry.

## 18 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

### ⚠ WARNING

#### Risk of electric shock!

Improper repairs are dangerous.

- Never make any technical modifications to the appliance or its features.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

| Fault                                                                                          | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The display goes out and — (▷   Start/Reload) flashes.                                         | Energy-saving mode is active <ul style="list-style-type: none"><li>▶ Press ▷   <b>Start/Reload</b>.</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| E:36 -10 / E:30 -80<br>The detergent solution is not being pumped out.                         | <p>The water outlet hose is connected too high, is kinked or trapped, or has been extended impermissibly.</p> <ul style="list-style-type: none"><li>▶ Check the installation of the water outlet hose.<br/>→ <i>Page 12</i></li></ul> <p>Drain pipe or water outlet hose is blocked.</p> <ul style="list-style-type: none"><li>▶ Clean the drain pipe and the water outlet hose.</li></ul> <p>The drain pump is blocked or the pump cover is not installed correctly.</p> <ul style="list-style-type: none"><li>▶ Check that the pump cover is installed correctly.<br/>→ <i>Page 33</i></li><li>▶ Clean the drain pump. → <i>Page 33</i></li></ul> <p>Detergent dosage is too high.</p> <ul style="list-style-type: none"><li>▶ Reduce the amount of detergent for the next washing cycle with the same load.</li></ul> |
| E:36 -25 -26                                                                                   | <p>Drain pump is blocked.</p> <ul style="list-style-type: none"><li>▶ Clean the drain pump. → <i>Page 33</i></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| H:32                                                                                           | <p>The appliance has interrupted the spin cycle because the laundry is unevenly distributed.</p> <ul style="list-style-type: none"><li>▶ Redistribute the laundry in the drum.</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| E:30 -10 /  | <p>The tap is turned off.</p> <ul style="list-style-type: none"><li>▶ Turn on the tap.</li></ul> <p>The water inlet hose is kinked or jammed.</p> <ul style="list-style-type: none"><li>▶ Check the installation of the water inlet hose.<br/>→ <i>Page 12</i></li></ul> <p>The filters in the water inflow are blocked.</p> <ul style="list-style-type: none"><li>▶ Clean the filters in the water inflow.</li></ul> <p>Scan the QR code to see an animation of the process.</p>                                                                                                                                                                                                                                                     |

| Fault                                                                                        | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E:30 -10 /  | <p>The water pressure is low.</p> <ul style="list-style-type: none"> <li>▶ Check whether the tap has sufficient water pressure.</li> </ul> <p>The water level measuring system is defective. With this error message, the appliance starts a draining process.</p> <ol style="list-style-type: none"> <li>1. Wait approx. 5 minutes until the draining process ends.</li> <li>2. Restart the appliance.</li> </ol> <p>If required, start the draining process again.</p> <ol style="list-style-type: none"> <li>3. If the fault persists, call customer service.</li> </ol> <p>→ <i>Page 42</i></p>                                                                                                                                                                                                                                                                  |
| E:30 -20                                                                                     | <p>Critical malfunction.</p> <ul style="list-style-type: none"> <li>▶ Turn off the water tap.</li> </ul> <p>With this error message, the appliance starts a draining process.</p> <ol style="list-style-type: none"> <li>1. Wait approx. 5 minutes until the draining process ends.</li> <li>2. Restart the appliance.</li> </ol> <p>If required, start the draining process again.</p> <ol style="list-style-type: none"> <li>3. If the fault persists, call customer service.</li> </ol> <p>→ <i>Page 42</i></p> <hr/> <p>Detergent dosage is too high.</p> <ul style="list-style-type: none"> <li>▶ Reduce the amount of detergent for the next washing cycle with the same load.</li> </ul> <hr/> <p>Additional water has been added.</p> <ul style="list-style-type: none"> <li>▶ Do not add any extra water to the appliance while it is operating.</li> </ul> |
| All other error codes.                                                                       | <p>Malfunction</p> <ol style="list-style-type: none"> <li>1. Press and hold  <b>Mini Load</b> and  <b>Silent Wash</b> for 3 seconds to restart the appliance.</li> <li>2. If the fault occurs again, disconnect the appliance from the power supply for at least 30 seconds. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.</li> <li>3. If the fault persists, call customer service.</li> </ol> <p>→ <i>Page 42</i></p> <p>Please specify the exact error message when calling. If possible, document the fault with photos and videos.</p>                                                                                                           |
| : flashes and the programme is paused.                                                       | <p>The appliance has detected fluctuations in the power supply.</p> <p>No action required. If the power supply is stable, the programme continues to run as normal.</p> <p><b>Note:</b> The programme duration is extended.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

| Fault                                                                                                   | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  or heavy foam build-up. | Detergent dosage is too high. <ul style="list-style-type: none"> <li>▶ Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into compartment II (not for outdoor clothing, sportswear or items stuffed with down).</li> <li>▶ Reduce the amount of detergent for the next washing cycle with the same load.</li> </ul>                                                                                                                                                                                         |
|  flashes.                | The door is not completely closed. <ol style="list-style-type: none"> <li>1. Ensure that there is no laundry trapped in the door.</li> <li>2. Close the door.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                      |
|                          | Drum cleaning is required. <ul style="list-style-type: none"> <li>▶ Clean the drum. → <i>Page 31</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                               |
| The display and buttons do not respond.                                                                 | Software fault. <ol style="list-style-type: none"> <li>1. Press and hold  <b>Mini Load</b> and  <b>Silent Wash</b> for 3 seconds to restart the appliance.</li> <li>2. If the fault occurs again, disconnect the appliance from the power supply for at least 30 seconds. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.</li> </ol> |
| Home Connect is not working properly.                                                                   | Different causes are possible. <ol style="list-style-type: none"> <li>1. Reset the appliance network settings. → <i>Page 30</i></li> <li>2. Set up Home Connect again. → <i>Page 29</i></li> </ol> <ul style="list-style-type: none"> <li>▶ Go to <a href="http://www.home-connect.com">www.home-connect.com</a>.</li> </ul>                                                                                                                                                                                                                  |
| The programme does not start.                                                                           | Childproof lock is activated. <ul style="list-style-type: none"> <li>▶ Deactivate the childproof lock. → <i>Page 28</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                            |
| The programme is paused or has been interrupted, but the door will not open.                            | The temperature is too high. <ul style="list-style-type: none"> <li>▶ Start the  <b>Rinse</b> . programme or wait until the temperature has dropped.</li> </ul> <hr/> Water level is too high. <ul style="list-style-type: none"> <li>▶ Start the <b>Spin</b> . programme or a suitable draining programme. → <i>Page 21</i></li> </ul>                                                                                                                     |
| The door cannot be opened due to a power cut.                                                           | The door is locked. <ul style="list-style-type: none"> <li>▶ Open the door using the emergency release. → <i>Page 41</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                           |
| Drum jerks after the programme starts.                                                                  | Not a fault. An internal motor test is started. No action required.                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Drum rotates, water does not flow in.                                                                   | Not a fault. Load detection is active for up to 2 minutes. No action required.                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| No water is visible in the drum.                                                                        | Not a fault. Water is below the visible area. No action required.                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

| <b>Fault</b>                                                                                                                                                           | <b>Cause and troubleshooting</b>                                                                                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The spin cycle runs several times.                                                                                                                                     | Not a fault. The appliance eliminates an imbalance by repeatedly redistributing the laundry.<br>No action required.                                                                                                                                                                                 |
| The appliance is vibrating, 'wandering' and making loud noises during the spin cycle.                                                                                  | Appliance is not correctly aligned.<br>▶ Align the appliance. → <i>Page 14</i><br>The appliance feet are not fixed.<br>▶ Secure the appliance's feet. → <i>Page 14</i><br>Transit bolts have not been removed.<br>▶ Remove the transit bolts.                                                       |
| High spin speed not reached.                                                                                                                                           |  <b>Easy Iron</b> is activated.<br>▶ Select a programme that is suitable for the type of fabric. → <i>Page 21</i><br>The appliance is using a reduced spin speed to eliminate an imbalance.<br>No action required. |
| The programme duration changes during the wash cycle.                                                                                                                  | Not a fault. The programme sequence is optimised electronically, another rinse cycle is switched on due to heavy foam build-up, or an imbalance is eliminated.<br>No action required.                                                                                                               |
| Whooshing, hissing or sucking noises.                                                                                                                                  | Not a fault. Water is pumped in or detergent solution is pumped out.<br>No action required.                                                                                                                                                                                                         |
| Banging noises, rattling in the drain pump.                                                                                                                            | A foreign object is in the drain pump.<br>▶ Clean the drain pump. → <i>Page 33</i>                                                                                                                                                                                                                  |
| There are detergent residues on the laundry.                                                                                                                           | Detergents may contain water-insoluble substances that deposit on the laundry.<br>▶ Start the  <b>Rinse</b> . programme or brush out the laundry after drying.                                                   |
| Damp stains have formed on the fabrics after the  <b>Steam</b> programme has ended. | Water droplets from the drum or from the door have moistened the fabrics. The drops come from either condensed steam or the residual moisture from the previous wash programme.<br>▶ Iron the fabrics or hang them up to dry.                                                                       |
| The laundry is too wet after the spinning cycle.                                                                                                                       | A low spin speed is selected.<br>▶ Start the <b>Spin</b> . programme.<br>▶ The next time you run a wash cycle, set a higher spin speed.<br>The appliance is using a reduced spin speed to eliminate an imbalance.<br><b>1.</b> Redistribute the laundry in the drum.                                |

| Fault                                                                                                                              | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                 |
|------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The laundry is too wet after the spinning cycle.                                                                                   | <p><b>2. Start the <b>Spin</b> . programme.</b></p> <p> <b>Easy Iron</b> is activated.</p> <p>► Set a suitable programme. → <i>Page 21</i></p>                                                                                                                                                           |
| Creasing.                                                                                                                          | <p>The selected programme is unsuitable for the type of fabric.</p> <p>► Set a suitable programme. → <i>Page 21</i></p> <p>A high spin speed is selected.</p> <p>► The next time you run a wash cycle, set a lower spin speed.</p> <p>The load is unsuitable.</p> <p>► Observe the programme's maximum load capacity. → <i>Page 21</i></p> <p>► Prepare the laundry. → <i>Page 25</i></p> |
| Water is leaking out at the water inlet hose.                                                                                      | <p>The water inlet hose is not correctly connected or is damaged.</p> <p>► Check the installation of the water inlet hose. → <i>Page 10</i></p> <p>Replace the water inlet hose if it is damaged.</p>                                                                                                                                                                                     |
| Water is leaking out at the water outlet hose.                                                                                     | <p>The water outlet hose is not connected correctly or is damaged.</p> <p>► Check the installation of the water outlet hose. → <i>Page 10</i></p> <p>Replace the water outlet hose if it is damaged.</p>                                                                                                                                                                                  |
| Water is leaking from below the door.                                                                                              | <p>Dirt on the door or seal causes leaks.</p> <p>► Clean the door and the seal.</p>                                                                                                                                                                                                                                                                                                       |
| Detergent or fabric softener drips off the seal and collects on the door or in the seal fold.                                      | <p>There is too much detergent or fabric softener in the detergent drawer.</p> <p>► When dosing, observe the marking in the detergent drawer. → <i>Page 27</i></p>                                                                                                                                                                                                                        |
| Residual water is present in the compartment  . | <p>Insert in compartment  is blocked.</p> <p>► Clean the detergent drawer. → <i>Page 32</i></p>                                                                                                                                                                                                        |
| Fabric softener remains in the detergent drawer.                                                                                   | <p>The use of fabric softener is not supported for the selected programme.</p> <p>► Check whether the use of fabric softener is supported for the selected programme. → <i>Page 21</i></p>                                                                                                                                                                                                |
| Odours have formed in the appliance.                                                                                               | <p>Humidity and detergent residue may promote the formation of bacteria.</p> <p>► Clean the drum. → <i>Page 31</i></p>                                                                                                                                                                                                                                                                    |


| Fault                                | Cause and troubleshooting                                                                                            |
|--------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| Odours have formed in the appliance. | ► If you are not using the appliance, leave the door and detergent drawer open so that residual water can evaporate. |

## 18.1 Emergency release

### Releasing the door

**Requirement:** The drain pump is empty. → *Page 33*

- 1. ATTENTION** – Escaping water may cause material damage.
  - Do not open the door if you can see water through the glass.
 Pull the emergency unlock downwards with a tool and release.

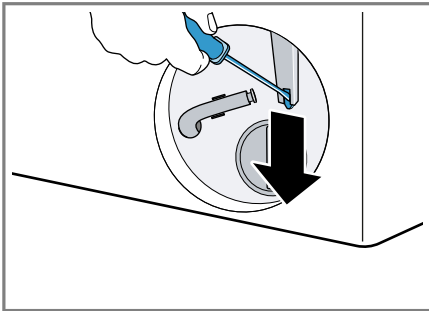

- ✓ The door lock is released.
- 2.** Insert the maintenance flap and lock it into place.
  - 3.** Close the service flap.

## 19 Transportation, storage and disposal

### 19.1 Removing the appliance


- 1.** Turn off the tap.
- 2.** Put the appliance into standby mode. → *Page 28*
- 3.** Unplug the appliance's mains plug.

- 4.** Drain the water.  
→ *"Cleaning the drain pump", Page 33*
- 5.** Detach the hoses.

### 19.2 Inserting the transit bolts

Secure the appliance before transportation using transit bolts in order to prevent transport damage.

- 1.** Use a screwdriver to remove the cover cap<sup>1</sup>.

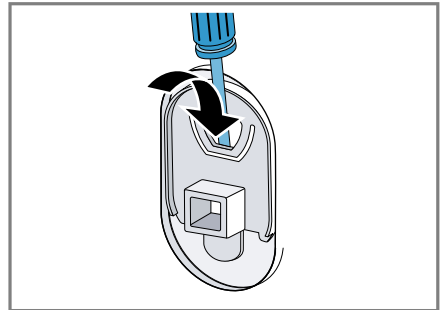

- Retain the cover cap.
- 2.** Insert the 4 transit bolts.

### 19.3 Using the appliance again

- For further information, see Installation and connection → *Page 10* and Starting an empty washing cycle → *Page 14*.

### 19.4 Disposing of old appliance

Valuable raw materials can be re-used by recycling.

<sup>1</sup> The number of cover caps varies depending on the model.

## **WARNING**

### **Risk of harm to health!**

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- ▶ With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner. Information about current disposal methods are available from your specialist dealer or local authority.

---

## **20 Customer Service**

You can obtain function-relevant and storable genuine spare parts from our Customer Service for up to 15 years from the date on which your appliance was placed on the market. For more information, please contact our Customer Service team.

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website.

### **20.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)**

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.), which you can find on the appliance's rating plate.

Depending on the model, the rating plate is located:

- On the inside of the door.
- Underneath the drum opening.
- On the inside of the maintenance flap.
- On the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

---

## **21 Consumption values**

The following information is provided in accordance with the EU Ecodesign Regulation. The values given for programs other than the **Eco 40-60** are indicative only and were determined in accordance with the applicable standard EN60456.

| Programme              | Load (kg) | Pro-gramm e dura-tion (h:min) <sup>1</sup> | Energy con-sump-tion (kWh/cycle) <sup>1</sup> | Water con-sump-tion (l/cycle) <sup>1</sup> | Max-imum temper-ature (°C) 5 mins <sup>1</sup> | Spin speed (rpm) <sup>1</sup> | Resid-ual mois-ture (%) <sup>1</sup> |
|------------------------|-----------|--------------------------------------------|-----------------------------------------------|--------------------------------------------|------------------------------------------------|-------------------------------|--------------------------------------|
| Eco 40-60 <sup>2</sup> | 11.0      | 3:59                                       | 1.090                                         | 70.0                                       | 39                                             | 1351                          | 53.00                                |
| Eco 40-60 <sup>2</sup> | 5.5       | 2:59                                       | 0.410                                         | 48.0                                       | 27                                             | 1351                          | 53.00                                |
| Eco 40-60 <sup>2</sup> | 3.0       | 2:59                                       | 0.180                                         | 35.0                                       | 24                                             | 1351                          | 53.00                                |
| Cottons ☼ . 20 °C      | 10.0      | 3:49                                       | 0.500                                         | 100.0                                      | 24                                             | 1400                          | 50.00                                |
| Cottons ☼ . 40 °C      | 10.0      | 3:49                                       | 1.250                                         | 100.0                                      | 43                                             | 1400                          | 50.00                                |
| Cottons ☼ . 60 °C      | 10.0      | 3:49                                       | 2.160                                         | 100.0                                      | 61                                             | 1400                          | 50.00                                |
| Easy Care ☼ . 40 °C    | 4.0       | 2:29                                       | 0.820                                         | 65.0                                       | 44                                             | 1000                          | 40.00                                |
| Mix ☼ 40 °C            | 4.0       | 1:00                                       | 0.660                                         | 46.0                                       | 41                                             | 1400                          | 52.00                                |
| ☼ Wool ☼ . 30 °C       | 2.0       | 0:40                                       | 0.230                                         | 43.0                                       | 24                                             | 800                           | 30.00                                |

## 22 Technical data

|                                  |                  |
|----------------------------------|------------------|
| Appliance height                 | 84.5 cm          |
| Appliance width                  | 59.8 cm          |
| Appliance depth                  | 59.0 cm          |
| Appliance depth with door closed | 63.2 cm          |
| Appliance depth with door open   | 104.9 cm         |
| Weight                           | 74.5 kg          |
| Maximum load                     | 11.0 kg          |
| Mains voltage                    | 220-240 V, 50 Hz |

⇒ Minimum in-  
stallation protec-  
tion

10 A

Nominal power 2300 W

<sup>1</sup> Due to the influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions, the actual values may deviate from the stated values.

<sup>2</sup> Test programme in accordance with the EU Ecodesign Directive and the EU Energy Labelling Regulation with cold water (15 °C).

|                                 |                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power consumption               | <ul style="list-style-type: none"><li>■ Standby mode: 0.50 W</li><li>■ Left-on mode: 0.50 W</li><li>■ Time until the networked standby mode is set (Wi-Fi): 5 mins</li><li>■ Networked standby mode (Wi-Fi): 2.00 W</li></ul> |
| Water pressure                  | <ul style="list-style-type: none"><li>■ Minimum: 100 kPa (1 bar)</li><li>■ Maximum: 1000 kPa (10 bar)</li></ul>                                                                                                               |
| Length of the water inlet hose  | 150 cm                                                                                                                                                                                                                        |
| Length of the water outlet hose | 150 cm                                                                                                                                                                                                                        |
| Length of the power cord        | 160 cm                                                                                                                                                                                                                        |

22.1 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free software or open source software. The applicable licence information is stored on your home appliance. You can also access the applicable licence information via your Home Connect app: "Profile -> Legal information -> Licence Information".<sup>1</sup> You can also download the licence information on the brand product website. (Please search on the product website for your appliance model and additional documents). Al-

ternatively, you can request the relevant information from oss-request@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany. The relevant source code will be made available on request. Please send your request to oss-request@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany. Subject: „OSSREQUEST“ The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

<sup>1</sup> Depending on the appliance specifications

## 23 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at [www.bosch-home.com](http://www.bosch-home.com) among the additional documents on the product page for your appliance.



2.4 GHz band (2400–2483.5 MHz): Max. 100 mW

5-GHz band (5150–5350 MHz + 5470–5725 MHz): max. 150 mW

|                                                                                  |    |    |    |    |    |         |    |    |    |
|----------------------------------------------------------------------------------|----|----|----|----|----|---------|----|----|----|
|  | BE | BG | CZ | DK | DE | EE      | IE | EL | ES |
|                                                                                  | FR | HR | IT | CY | LI | LV      | LT | LU | HU |
|                                                                                  | MT | NL | AT | PL | PT | RO      | SI | SK | FI |
|                                                                                  | SE | NO | CH | TR | IS | UK (NI) |    |    |    |

5 GHz WLAN (Wi-Fi): For indoor use only.

|    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|
| AL | BA | MD | ME | MK | RS | UK | UA |
|----|----|----|----|----|----|----|----|

5 GHz WLAN (Wi-Fi): For indoor use only.

[illegible]

This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across the entire width of the page, providing a guide for writing. The background is a solid off-white color. There are no margins, text, or other markings present.



# Many thanks for choosing a Bosch home appliance!

Register your new appliance now on MyBosch and benefit directly from:

- **Expert advice and tips to make the most of your appliance**
- **Options for warranty extension**
- **Discounts on spare parts and accessories**
- **Digital information for use and all appliance data to hand**
- **Easy access to Bosch Home Appliance Service**

Simple to register, free of charge – including on mobile devices:

**[www.bosch-home.com/welcome](http://www.bosch-home.com/welcome)**



## Need some help? You can find it here.

Expert advice on your Bosch home appliances, help with problems or repairs by professionals from Bosch.

Discover all the different ways Bosch can assist you:

**[www.bosch-home.com/service](http://www.bosch-home.com/service)**

The contact details of all countries are listed in the attached service directory.

### **BSH Hausgeräte GmbH**

Carl-Wery-Straße 34  
81739 München, GERMANY  
[www.bosch-home.com](http://www.bosch-home.com)

A Bosch Company



**9002013707** (051104)

en